



LUXE

8-IN-1 AIRSTYLER PRO HAIR DRYER AND STYLER



Operating Instructions/Safety Guide
Mode d'Emploi/Guide de Sécurité
Instrucciones de Uso/Guía de Seguridad



LUXE

8-IN-1 AIRSTYLER PRO HAIR DRYER AND STYLER

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS BEFORE USING.**
- **KEEP AWAY FROM WATER.**

DANGER: As with most electrical appliances, electric parts are electrically live even when the switch is off.

To reduce the risk of death by electrical shock:

- Always “unplug it” immediately after using.
- Do not use while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- If an appliance falls into water, “unplug it” immediately. Do not reach into the water.

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- An appliance should never be left unattended when plugged in.
- Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged in any manner or dropped into water. Return the appliance to us for repair or replacement.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
- Keep the cord away from hot or heated surfaces. Do not wrap the cord around the appliance.
- Never use while sleeping.

- Never drop or insert any object into any opening or hose.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not direct hot air toward eyes or other heat-sensitive areas.
- Attachments will be hot during use. Allow them to cool before handling.
- Do not place appliance on any surface while it is operating or while switch is turned on.
- While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
- Do not operate with a voltage converter.

SAVE THESE INSTRUCTIONS

LIST OF PARTS

1. Attachment Release
2. Rotate Styler
3. Cold Shot
4. 3 Air Speeds
5. 4 Heat Settings
6. On / Off Switch
7. Digital LED Screen
8. Extra-Long 9-Ft. Cord
9. 1" Barrels, Left and Right
10. 1.5" Barrels, Left and Right
11. Diffuser
12. Concentrator
13. Volumizing Pik
14. Oval Brush
15. Smoothing Brush



USER MAINTENANCE INSTRUCTIONS

SPECIAL INSTRUCTIONS

1. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.

LINE CORD SAFETY TIPS



1. Never pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.

3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

OPERATING INSTRUCTIONS

This appliance is for household use and can be plugged into any 125 Volt AC outlet. This appliance is equipped with a thermostat that will cycle "OFF" if the temperature exceeds the comfort level due to partially blocked air inlet or air outlet openings. In the event that the appliance stops during use, turn off the switches and allow the appliance to cool down, at which time the thermostat will automatically reset. During use, do not block the air openings.

1. **Power Switch:** To turn on, switch up; to turn off, switch off. The dryer is equipped with a memory function. It will remember your last setting on your next usage.
2. To adjust the air speed, press the fan  button for the desired speed. The 3 speeds will appear in the LED screen ("•", "••", "•••").
3. To adjust air temperature, press the thermostat  button. The 4 temperatures will appear in the LED screen: 120°F, 160°F, 190°F, and 100°F.
4. To use the Cool Shot feature, press and hold the Cool Shot button and the blow dryer will blow out cool air. Release the button to return to heated air. Or set the temperature to 100°F. The LED indicator will turn red and flash.
5. To change from Styling Mode to Dryer Mode, slide and hold down the lock, rotate the nozzle. Keep rotating until the nozzle is clicked into place. To switch back to Styling Mode, slide down and hold the lock and rotate nozzle back into upright position.
6. LED Screen showcases the 3 air speeds and the 4 heat settings.
7. **Concentrator:** Concentrates heat and air for quick drying and easy styling.
8. **Barrel Attachments:** Creates a bouncy blowout.
9. **Volumizing Pik Attachment:** Creates volume at roots. Separates and defines curls.
10. **Diffuser:** Use for quick frizz-free drying on curly hair.
11. **Oval Brush:** Creates a smooth blowout.
12. **Smoothing Brush:** Smooths and straightens hair to create a sleek blowout.

USAGE

1. Select the appropriate attachment. Align the attachment to the dryer and install it on the dryer.
2. Connect the plug to the power socket.
3. When in use, the air speeds and temperature settings are adjustable according to your preference.
4. Using the curl barrel attachments: Start with towel-dried hair. Take and hold a ½ inch to 1 inch section of hair. Let the ends dangle and place the barrel behind the ends. The barrel will automatically attract the other strands to the barrel in the direction of the arrow. Slowly bring the barrel directly to the roots and hold for 5-8 seconds.

No need to twist the tool to curl. Repeat the above operation with the two barrels until the desired styling is achieved.

5. Using the Pik attachment: Before using the Volumizing Pik, style hair completely with the desired attachment. Tussle the root of your hair with the teeth of the pik to create volume. Start at the root and pull the pik up and away from the scalp. Repeat the above operation until the desired styling is achieved.

6. Using the Diffuser attachment: Start with towel-dried hair. Work your way around your head, bunch curls from the ends between the teeth of the diffuser. Bring the diffuser up to your roots. Pause and hold for 5-8 seconds. For added volume, flip your head upside down and bunch curls from below. Repeat the above operation until the desired styling is achieved.

7. Using Oval Brush attachment: Start with mostly dried hair. Take a 2 inch section of hair and place the oval brush at the base of your roots. Roll the brush outward and down from roots to ends. Repeat the above operation until the desired styling is achieved.

8. Using Smoothing Brush Attachment: Start with mostly dried hair. Take a 1-inch section of hair and place the prongs of the brush underneath the hair at the root. Prongs should be facing out. Gently glide the brush down from the root to the ends. Repeat the above operation until the desired styling is achieved.

9. Using Concentrator attachment: Start with towel-dried hair. Take a 2-inch section of hair and slowly move the mouth of the nozzle from root to tip, until dried. Pro tip: Using a round brush with the concentrator can create a smooth and sleek style. Repeat the above operation until the desired styling is achieved.

AFTER USE

1. Turn off the dryer and unplug the power plug.
2. Put the dryer on a heat-resistant surface until it cools down.
3. Once the dryer and attachments are cool, press the unlock button and remove the attachments.
4. Disassemble the rear cover, and clean the air inlet regularly.
5. Store the dryer in a safe, dry and clean place.

LINT FILTER



This dryer is equipped with a removable lint filter. Please clean your filter and remove any lint and debris from this filter monthly.

HOW TO USE THE ALCI

The ALCI safety device in this unit is built into the plug. This device will make it inoperable under some abnormal conditions, such as accidental immersion in water. If the appliance is immersed in water, do not attempt to reset the ALCI safety device. The ALCI safety device is equipped with a test button so that its operation can be checked.

TO USE:

1. Press the Reset button on the ALCI safety device.
2. Plug your ALCI into an AC outlet then press the Test button.
3. The Reset button will pop out. This verifies the

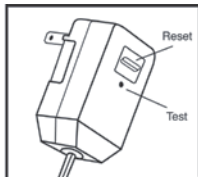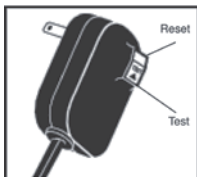

safety device is operating properly. If the Reset button does not pop out, do not use the unit. Return it immediately for service.

4. Press the Reset button to reactivate the ALCI safety device. Your hair dryer is ready for use.

Repeat this procedure every time you use the hair dryer to confirm that the safety device is ready and operational.

SPECIAL ATTENTION

- If the dryer detects an electrical shock hazard, it will immediately shut off. To restore power, press the Reset button on the ALCI safety device to reactivate the circuit.
- **The ALCI Plug is also equipped with a system that automatically checks to make sure the ALCI plug is functioning properly. If the LED light on the plug is flashing, that means the safety device is not functioning properly. Do not use the unit and return it immediately for service.**
- This appliance is designed with a protective coating around the heating coils. When operating the first few times, you may notice momentary smoking when turning unit on. This represents no danger to the user and does not indicate a defect in the unit. The smoke should dissipate within a short time.
- Never block the air intake grill, as this will cause the unit to overheat. Should this happen, a built-in safety system will operate, and the unit will be shut off automatically. Turn the unit Off and clear any obstruction from the air intake grill. Wait 10 minutes before operating the appliance. If the appliance has sustained damage, do not try to repair it. See warranty for instructions.
- Never touch heating section as it may be hot and can burn you.
- To avoid possible scalp or hair burns, use very hot and fast setting only when hair is wet. Reduce to lower heat as hair dries.
- Do not keep appliance directed at one place; keep it in constant motion. This is especially important if drying a wig, which could be damaged by heat.
- For maximum airflow, hold dryer not closer to the head than six inches.
- To extend the life of the dryer, it is recommended to switch it to the coolest setting for a few seconds before shutting it off.
- Untwist the cord from time to time to avoid tangling.

MAINTENANCE:

Your dryer is designed with a removable lint filter. It is necessary to open the lint filter and clean out lint and debris on a monthly basis to prolong the life of the hair dryer and prevent overheating during use.

Your appliance is designed for household use and is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the appliance from the power source and wipe the exterior with a damp cloth. If any malfunction occurs, unplug the appliance, allow it to cool and return to place of purchase. Do not attempt to repair. This appliance has no user-serviceable parts.

STORAGE:

When not in use, "unplug it". Allow appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully for long life, and avoid jerking, twisting or straining especially at plug connections.

LIMITED WARRANTY

Arcadia Beauty Labs LLC (“we”, “us”, or “our”) warrants product against defects in materials and workmanship for one (1) year from original purchase date (“Warranty Period”). If you cannot prove original purchase date, Warranty Period runs one (1) year from date of product manufacture. If we receive a valid claim, we will repair or replace with product of equal or greater value at our option.

This Warranty Does Not Cover normal wear and tear such as shorts in the power supply cord or plug or excessive product buildup on barrel or scratched or damaged barrel or damage due to accident, misuse or abuse such as: dropping (broken or cracked handle, broken or loose connection, rattling noise, etc.), wrong voltage supply, or neglect in safety precautions, or tampering such as repair or attempted repair by unauthorized person, or use of unauthorized attachments.

What to Do if You Have a Claim: If the product fails to operate properly under normal use because of a covered defect: (1) within 60 days from purchase: simply return to place of purchase with valid, dated receipt for a no charge replacement, or (2) after 60 days and within the Warranty Period:


Further instructions and return address will be provided for the claim process when you call our service center at 1-708-442-8965.

TO THE MAXIMUM EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES AND CONDITIONS SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. WE SPECIFICALLY DISCLAIM ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IF WE CANNOT LAWFULLY DISCLAIM OR EXCLUDE IMPLIED WARRANTIES UNDER APPLICABLE LAW, THEN TO THE EXTENT WE CANNOT DISCLAIM WARRANTIES, ALL SUCH WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE SHALL EXPIRE ON EXPIRATION OF THE WARRANTY PERIOD. WE EXPRESSLY EXCLUDE, AND WE WILL NOT PAY, CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR THE BREACH OF ANY WARRANTY, AND WE ASSUME NO RESPONSIBILITIES FOR YOUR LOSS OF THE USE OF THE PRODUCT, OR FOR ANY OTHER INCONVENIENCE OR CONSEQUENTIAL EXPENSE.

Your Legal Rights: Some countries, states, provinces and/or jurisdictions do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

If you have any questions regarding warranty or service locations, call us at 1-708-442-8965. Arcadia Beauty Labs LLC, 9975 Moya Boulevard, Reno, Nevada 89506. (Do Not Send Mail/Damaged Products to this Address.)

**IMPORTANT
MESSAGE
TO
CONSUMERS**

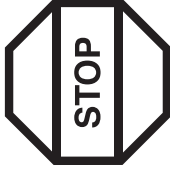

**THIS MESSAGE ABOUT
GROUND FAULT CIRCUIT INTERRUPTERS
CAN SAVE A LIFE**

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI NOW!

Your local electrician can help you decide which type is best for you – A portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCI's in the bathroom, garages, and outdoor outlets of all new homes.



WHY DO YOU NEED A GFCI?

Electricity and water don't mix if your hair dryer falls in water while it's plugged in, the electric shock can kill you ... **even if the switch is "off."**

A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

**A GFCI CAN SAVE YOUR LIFE!
COMPARED TO THAT, THE PRICE IS SMALL!
DON'T WAIT... INSTALL ONE NOW!**



Manufactured for Ion Professional Products.

Distributed by Arcadia Beauty Labs LLC,

9975 Moya Boulevard, Reno, Nevada 89506.

**Importado Por SBCBSG Company de México, S. de R.L. de C.V.,
Sinaloa 914, Col. Nuevo Repueblo, Monterrey, Nuevo León 64700,**

MÉXICO. SME010913TS3

Made in China • Fabriqué en Chine • Fabricado en China